
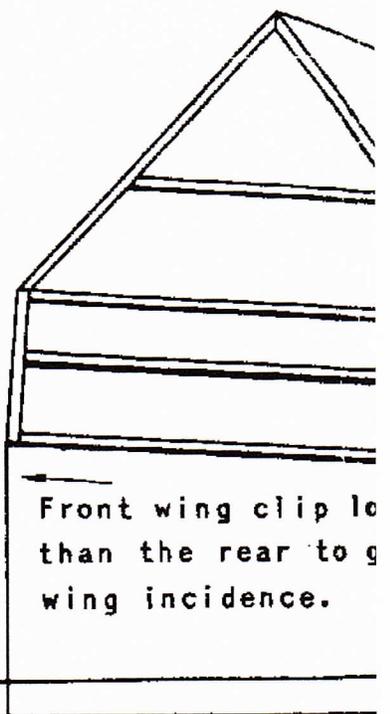



R.O.G.

KIT R-1

Bend prop shaft as shown and cement.

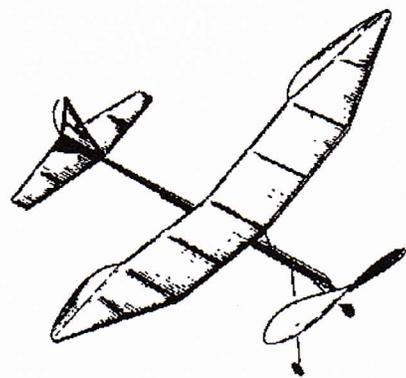


Front wing clip to
than the rear to get
wing incidence.

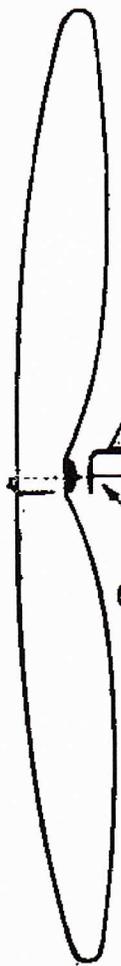

Cement bearing to stick.
Also use thread.

Cement landing gear to stick.
Bend bearing slightly backward

Cement washer
to propeller

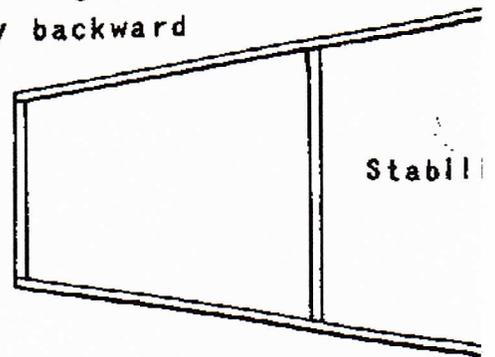

Stabilizer

Drop of cement to prevent
wheels from coming off.



C. A. ZAIC CO., INC., 883 LEXINGTON AVENUE
BROOKLYN 21, NEW YORK

Power 7" loop of 1/8" flat rubber.

Paste on cut
and cut
Tabs cut from